
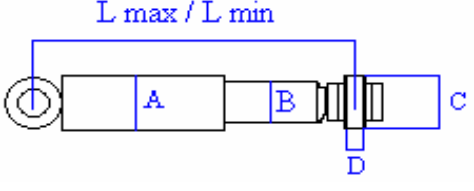




### Air suspension Trailer Axels


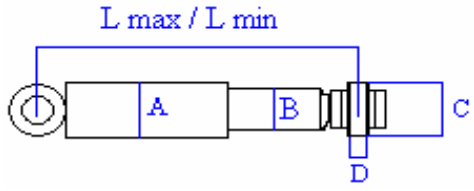


Kobex No.	Application	OEM Reference / To replace							
				L max	L min	A	B	D	C
501810	BPW	02 3702 1800	O/O	798	476	82	73	24	55
501820	BPW	02 3702 1400	O/O	675	405	82	73	20	55
501830	BPW	02 3702 6700	O/O	767	465	82	73	24	55
501840	BPW	02 3702 1000	O/O	800	481	82	73	24	55
501850	BPW	02 3702 5100	O/O	700	432	82	73	24	55
501860	BPW	02 3702 2000	O/O	695	428	82	73	24	55
501870	BPW	02 3702 1600	O/O	493	332	82	73	24	55
501880	BPW	02 3722 1400	O/O	496	327	82	73	24	55
501890	BPW	02 3702 7000	O/O	432	295	82	73	24	55
501910	BPW	02 3702 9200	O/O	540	350	82	73	24	55
502010	ROR	21215742	O/O	429	297	82	73	20	62
502020	ROR	21222271	O/O	429	297	82	73	24	58
502010	ROR	21215807	O/O	429	297	82	73	20	62
502040	ROR	21216058	O/O	470	332	82	73	24	58
502010	ROR	21221306	O/O	429	297	82	73	20	62
502010	ROR	21215742	O/O	429	297	82	73	20	62
502010	ROR	21215807	O/O	429	297	82	73	20	62
502050	ROR	21221348	O/O	480	297	82	73	20	58
502055	Dunlop/YORK	PNP310660200	O/O	440	308	82	73	22	49
502056	YORK	506246	O/O	440	308	82	73	22	49
502057	YORK	507172	O/Ø	440	308	82	73	22	49/Pin
502058	YORK	508571	O/O	440	320	82	73	24	58


Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only



### Air suspension Trailer Axels

Part No.	Application	OEM Reference / To replace							
				L max	L min	A	B	D	C
503010	SAF	<b>2.376.0003.00/01/02</b>	O/O	619	384	82	73	20	45
503010	SAF	<b>2.376.0017.00</b>	O/O	619	384	82	73	20	45
503010	SAF	<b>2.376.1007.01</b>	O/O	619	384	82	73	20	45
503010	SAF	<b>2.376.1007.52</b>	O/O	619	384	82	73	20	45
503050	SAF	<b>2.376.0010.01/02</b>	O/O	475	320	82	73	20	62
503055	SAF	<b>2.376.0010.00</b>	O/O	475	320	82	73	20	58
503060	SAF	<b>2.376.0020.00</b>	O/O	560	360	82	73	20	62
503070	SAF	<b>2.376.1001.00</b>	O/O	1050	630	82	73	24	55
503080	SAF	<b>2.376.0019.00</b>	O/O	767	467	82	73	24	55
504510	Fruehauf	<b>1527867</b>	O/O	448	316	82	73	20	45
504510	Fruehauf	<b>1521533</b>	O/O	448	316	82	73	20	45
504520	Fruehauf	<b>1527870</b>	O/O	378	276	82	73	20	45
504530	Fruehauf	<b>1526583</b>	O/O	423	305	82	73	24	58
504540	Fruehauf	<b>1526855</b>	O/O	472	320	82	73	20	55
504550	Trailor	<b>6505245X</b>	O/O	510	336	82	73	20	55
504560	Trailor	<b>6506635A</b>	O/O	475	315	82	73	24	62
505011	Gigant	<b>196111</b>	O/O	502	330	82	73	24	55
505020	Hendricson	<b>508571(Q824)</b>	O/O	440	310	82	73	24	58
505031	KLTJ 0312	<b>Koni 0805 91.2713</b>	O/O	415	277	82	73	20/78	20/68
505032	KLTJ 0313	<b>Koni 0805 91.2714</b>	O/O	482	310	82	73	20/78	20/68
505033	KLTJ 0314	<b>Koni 0105 91.2715</b>	O/O	528	333	82	73	20/78	20/68

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only




## Trucks and Buses

# KOBEX


Kobex No.	Application	OEM Reference / To replace	Series		Top Mounting	Bottom Mounting
<b>572205</b>	Mercedes Cabin	000 891 2205	S-26	O/O	18x34	18x34
<b>570305</b>	Mercedes Cabin	000 891 0305	S-26	O/O	12x32	12x32
<b>571805</b>	Mercedes Cabin	000 891 1805	S-26	O/O	18x34	18x34
<b>572005</b>	Mercedes Cabin	000 891 2005	S-26	O/O	12x32	12x32
<b>572819</b>	Actros Cabin	942 890 2819	S-30	O/O	14x40	25x40
<b>573619</b>	Actros Cabin	942 890 3619	S-30 R	O/O	14x40	14x40
<b>573119</b>	Actros Cabin	942 890 3119	S-30 R	O/O	14x40	14x40
<b>571619</b>	Actros Cabin	942 890 1619	S-30M	I/□	M12x1.5	NA
<b>575419</b>	Actros Cabin	942 890 5419	S-30 R	O/O	14x50	25x38
<b>571506</b>	Actros Cabin	Sachs 30 1700 112 563	S-30M	I/□	M12x1.5	NA
<b>570555</b>	Mercedes Cabin	Sachs 28 1700 170555	S-26	O/O	12x32	12x32
<b>576455</b>	Mercedes 911	24 1700 106 455	S-36	O/O	16x50	16x50
<b>570900</b>	Mercedes Bus	004 323 0900	S-30	O/I	16x40	M14x1.5
<b>577400</b>	Mercedes Bus	003 326 7400	S-41	I/I	M14x1.5	M14x1.5
<b>577500</b>	Mercedes Bus	003 326 7500	S-41	I/I	M14x1.5	M14x1.5
<b>570700</b>	Mercedes Truck	006 323 0700	S-30	O/O	16x50	16x50
<b>571400</b>	Mercedes Truck	005 326 1400	S-36	O/O	16x50	16x50
<b>573931</b>	Mercedes Truck	Sachs 14 1700 123 931	S-30	O/O	16x50	16x50
<b>579500</b>	Mercedes Truck	006 323 9500	S-45	O/O	20x50	20x50
<b>574400</b>	Mercedes Truck	004 323 4400	S-36	I/O	M14x1.5	14x40
<b>577200</b>	Mercedes Bus Steering	H 6251105	S-30	X/O	Tie Rod	14/40

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only




## Trucks and Buses

# KOBEX


Kobex No.	Application	OEM Reference / replace	To	Series		Top Mounting	Bottom Mounting
<b>584088</b>	Volvo Cabin	1594088		S-26	O/O	14x32	14x32
<b>582085</b>	Volvo Cabin	1622085		S-26	O/O	14x32	14x32
<b>582086</b>	Volvo Cabin	1622086		S-26	O/O	14x32	14x32
<b>587562</b>	Volvo Cabin	1587562		S-26	O/O	14x32	14x32
<b>580389</b>	Volvo Cabin	1580389		S-26H	O/O	14x32	14x32
<b>588043</b>	Volvo Cabin	158043		S-26	O/O	12x32	12x32
<b>585586</b>	Volvo Cabin	1585586		S-26	O/O	14x32	14x32
<b>589722</b>	Volvo Cabin	1629722		S-30	O/O	14x45	20x45
<b>589721</b>	Volvo Cabin	1629721		S-30	O/O	14x45	14x45
<b>585445</b>	Volvo Cabin	1075445		S-30A	O/O	14x45	14x45
<b>588859</b>	Volvo Cabin	3198859		S-30A	O/O	14x45	14x45
<b>589836</b>	Volvo Cabin	3198836		S-26A	I/O	M12x1.75	14x45
<b>589849</b>	Volvo Cabin	3198849		S-26	O/O	20x45	20x45
<b>582227</b>	Volvo Cabin	1622227		S-30	O/O	14x45	14x45
<b>583538</b>	Volvo FL 10	8153538		S-36H	I/I	M14x1.5	M14x1.5
<b>589833</b>	Volvo FL 10	8159833		S-36H	O/O	16x100	16x66
<b>585163</b>	Volvo	1605163		S-45	O/I	16x50	M16x1.5
<b>588106</b>	Volvo	1598106		S-45	O/O	20x50	20x50
<b>589405</b>	Volvo	1629405		S-45	O/I	16x100	M16x1.5
<b>589477</b>	Volvo	1629477		S-45	I/I	M16x1.5	M16x1.5
<b>584546</b>	Volvo	20374546		S-45	O/O	16x100	NA
<b>584545</b>	Volvo	20374545		S-36	O/O	16x100	16x66
<b>585556</b>	Volvo	20585556		S-45	O/O	16x100	20x50

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only



## Trucks and Buses

# KOBEX


Kobex No.	Application	OEM Reference / replace	To	Series		Top Mounting	Bottom Mounting
<b>597398</b>	Scania cabin	1397398		S-30 H	I/I	M12x1.75	M16x2
<b>597396</b>	Scania cabin	1397396		S-30 H	I/I	M12x1.75	M16x2
<b>592827</b>	Scania cabin	1382827		S-30 H	I/I	M12x1.75	M16x2
<b>598119</b>	Scania cabin	1348119		S-30 H	I/O	M12x1.75	10x50
<b>599007</b>	Scania cabin	349007		S-26	I/I	M12x1.75	M12x1.75
<b>597242</b>	Scania cabin	367242		S-26	I/I	M12x1.75	M12x1.75
<b>593290</b>	Scania cabin	393290		S-26	I/O	M12x1.75	14x50
<b>591810</b>	Scania Chassis	1381810		S-45	I/I	M14x1.5	M16x1.5
<b>591807</b>	Scania Chassis	1381807		S-36H	I/O	M14x1.5	22
<b>593105</b>	Scania Chassis	1353105		S-36H	I/O	M14x1.5	22
<b>590427</b>	Scania Chassis	1380427		S-45	O/O	20x50	20x50
<b>590425</b>	Scania Chassis	1380425		S-50H	O/O	20x50	20x50
<b>510210</b>	Renault Cabin	5010 316 210		S-26 P	O/O	12x40	12x40
<b>514601</b>	Renault Cabin	5010 460 113		S-30	O/O	14x45	14x45
<b>513685</b>	Renault Chassis	5010 383 685		S-50 H	O/O	20x55	20x62
<b>513693</b>	Renault Chassis	5010 383 693		S-36	I/I	M14x1.5	M14x1.5
<b>518561</b>	Renault Chassis	5010 138 561		S-45	I/I	M14x1.5	M14x1.5
<b>558444</b>	Iveco Chassis	4121 8444		S-36	I/O	M14x1.5	16x50
<b>554635</b>	Iveco Chassis	9948 4635		S-45	I/O	M14x1.5	NA
<b>555844</b>	MAN Cabin	Sachs 105 844		S-30S	O/O	NA	NA
<b>556012</b>	MAN Cabin	81.41722.6012		S-26S	O/O	14x40	14x40
<b>556013</b>	MAN Cabin	81.41722.6013		S-26S	O/O	14x40	14x40

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only



**Land Rover**

**KOBEX**


Kobex No.	Application	OEM Reference / To replace	Series		Top Mounting	Bottom Mounting
<b>407001</b>	Land Rover 109 Front	RTC 4483 / RTC 4484	S-36	O/O	Split Bush	Split Bush
<b>403859</b>	Land rover 109 Rear	RTC 4442	S-36	O/I	Split Bush	1/2" UNF
<b>407849</b>	Land Rover 110 Front	RSC 100040 /RTC 4311	S-36	I/I	1/2" UNF	1/2" UNF
<b>407851</b>	Land Rover 110 Rear	RTC 6359 / RTC 4639	S-36	O/I	19.1x40	1/2" UNF
<b>403696</b>	Land Rover 109 Front	Long Type	S-36	O/O	Split Bush	Split Bush
<b>404008H</b>	Steering Damper 109	Horizontal Application	S-26 H	I/I	M10 Kit	M10 Kit
<b>404006H</b>	Steering Damper 110	Horizontal Application	S-26 H	I/I	M10 Kit	M10 Kit
<b>401700</b>	SER III Rear	RTC 4235 HD 88	S-36	O/I	Split Bush	1/2" UNF
<b>404236</b>	Land Rover 109Rear	RTC 4236 HD	S-36	O/I	Split Bush	1/2" UNF
<b>401981</b>	SER III Front	RTC 4234 HD 88	S-36	O/O	Split Bush	Split Bush
<b>404233</b>	SER III Rear RR 1Ton	RTC 4233 / N 6591706	S-36	O/O	Split Bush	Split Bush
<b>404231</b>	SER III Rear	RTC 4231	S-36	O/O	Split Bush	Split Bush
<b>397001</b>	Land Rover 109 Front	Super Duty	S-30	O/O	Split Bush	Split Bush
<b>393859</b>	Land rover 109 Rear	Super Duty	S-30	O/I	Split Bush	1/2" UNF
<b>397849</b>	Land Rover 110 Front	Super Duty	S-30	I/I	1/2" UNF	1/2" UNF
<b>397851</b>	Land Rover 110 Rear	Super Duty	S-30	O/I	19.1x40	1/2" UNF
<b>393696</b>	Land Rover 109 Front	Super Duty	S-30	O/O	Split Bush	Split Bush
<b>401700</b>	SER III Rear	Super Duty	S-30	O/I	Split Bush	1/2" UNF
<b>404233</b>	SER III Rear RR 1Ton	Super Duty	S-30	O/O	Split Bush	Split Bush
<b>401981</b>	SER III Front	Super Duty	S-30	O/O	Split Bush	Split Bush

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only



## Cars and SUVs

# KOBEX


Kobex No.		OEM Reference / To replace	Series		Top Mounting	Bottom Mounting
<b>303373</b>	Land CruiseJ 75	Tokico 3373	S-30	O/O	18	18
<b>303374</b>	Land Cruiser BJ 70-74	Tokico 3374	S-30	I/O	M10x1.25	18
<b>303375</b>	Land Cruiser FJ 75,H	Tokico 3375	S-30	O/O	18	18
<b>303365</b>	Hiace Rear Wagon	Tokico 3365	S-30	O/O	16	18
<b>302518</b>	Toyota/Nissan Rear	Tokico 2518	S-26	O/O	M10x1.25	12x32
<b>303392</b>	Hiace Front YH 80,	Tokico 3392	S-30	O/O	M10x1.25	12x32
<b>302219</b>	Datsun front Truck/Pk	Tokico 2219	S-26	O/O	NA	NA
<b>302483</b>	Cressida Rear/HiluxRN	Tokico 2483	S-26	O/O	12x32	12x32
<b>302515</b>	Hilux Front RN30,33,4	Tokico 2515	S-26	I/I	M10x1.25	Split PIN
<b>302649</b>	Hilux Front RN 36,39	Tokico 2649	S-26	O/O	16	16
<b>302726</b>	Hilux Front LN 50,51	Tokico 2726	S-26	O/I	M10x1.25	Split PIN
<b>302859</b>	Hilux Rear YN 100,105	Tokico 2859	S-26	O/O	20x50	20x50
<b>301619</b>	TOYOTA	KYB 1619 A	S-26	O/O	NA	NA
<b>301634</b>	TOYOTA	KYB 1634 A	S-26		NA	NA
<b>301608</b>	TOYOTA	KYB 1608 A	S-26	O/O	NA	NA
<b>301022</b>	TOYOTA	KYB KA 1022	S-26	O/O	NA	NA
<b>301013</b>	TOYOTA	KYB KA 1013	S-26	O/O	NA	NA
<b>301110</b>	Land Cruiser Front	KYB 441110	S-30	O/O	12x40	12x62
<b>302018</b>	Suzuki Alto Rear	KYB 342018	S-22	O/O	12x32	12x32

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only



## Cars and SUVs

# KOBEX

Kobex No.	Application	OEM Reference / To replace	Series		Top Mounting	Bottom Mounting
<b>311051H</b>	Land Cruiser Steering	Gabriel 721051/14021	S-26 H	I/O	M10x1.25	16
<b>311054H</b>	Land Cruiser Steering	Gabriel 721054/14024	S-26 H	X/X	PIN	PIN
<b>311058H</b>	Land Cruiser Steering	Gabriel 721058/14033	S-26 H	O/X	10x28	PIN
<b>312550H</b>	Land Cruiser Steering	2550	S-26 H	X/X	PIN	PIN
<b>302112</b>	NISSAN	Gabriel 612112	S-26	NA	NA	NA
<b>302113</b>	NISSAN	Gabriel 612113	S-26	NA	NA	NA
<b>302346</b>	NISSAN	Gabriel 612346	S-26	NA	NA	NA
<b>302553</b>	NISSAN	Gabriel 612553	S-26	NA	NA	NA
<b>302554</b>	NISSAN	Gabriel 612554	S-26	NA	NA	NA
<b>716860</b>	Land Cruiser	6860	S-41	O/O	NA	NA
<b>710496</b>	Land Cruiser HD	660496	S-36	O/O	NA	NA
<b>353522</b>	KIA Pride	KK 135 28 700 A	S-30	I/O	NA	NA
<b>353523</b>	KIA Pride	KK 137 34 900	S-30 St	I/E	NA	NA
<b>353525</b>	KIA Pride	KK 137 34 700	S-30 St	I/E	NA	NA
<b>353570</b>	KIA K 2700	OK63B28700	S-26	O/O	16	16
<b>353571</b>	KIA K 2700 R	OK60A34700A	S-26	O/O	16	16
<b>354500</b>	Pican	Cartridge	S-30	I/U	NA	NA
<b>931695</b>	Volkswagen Golf II / III		S-26	I/O	M10x1.25	10 x 50
<b>931786</b>	Skoda Favorit rear		S-26	I/O	M10x1.25	10 x 50

Manufacturer's and other wholesaler's part numbers used in this list are for cross reference purpose only